

## TURBIDITY CURTAIN

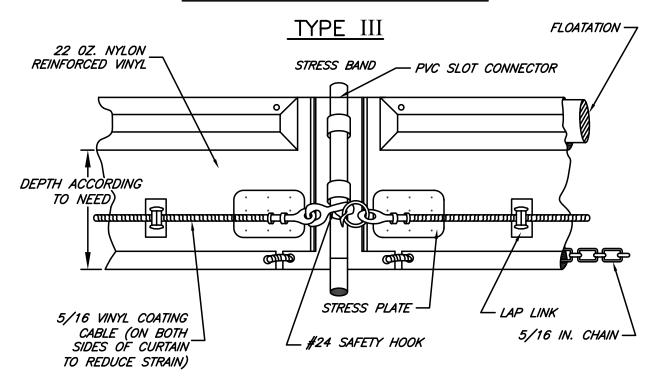

## ORIENTATION WHEN INSTALLED (TIDAL SITUATION -TYPE III)

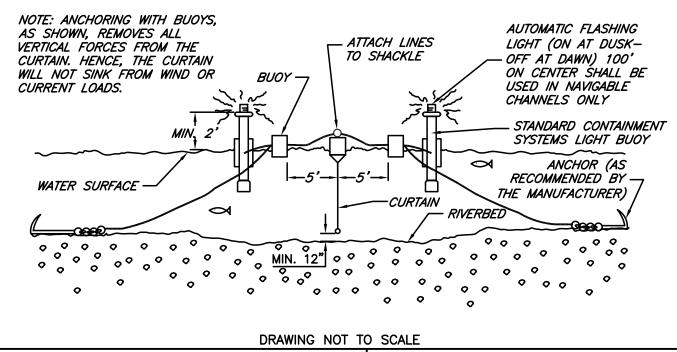

EROSION CONTROL MANUAL

TURBIDITY CURTAIN CONNECTIONS & ANCHORING

Detail Drawing 4.6-C