

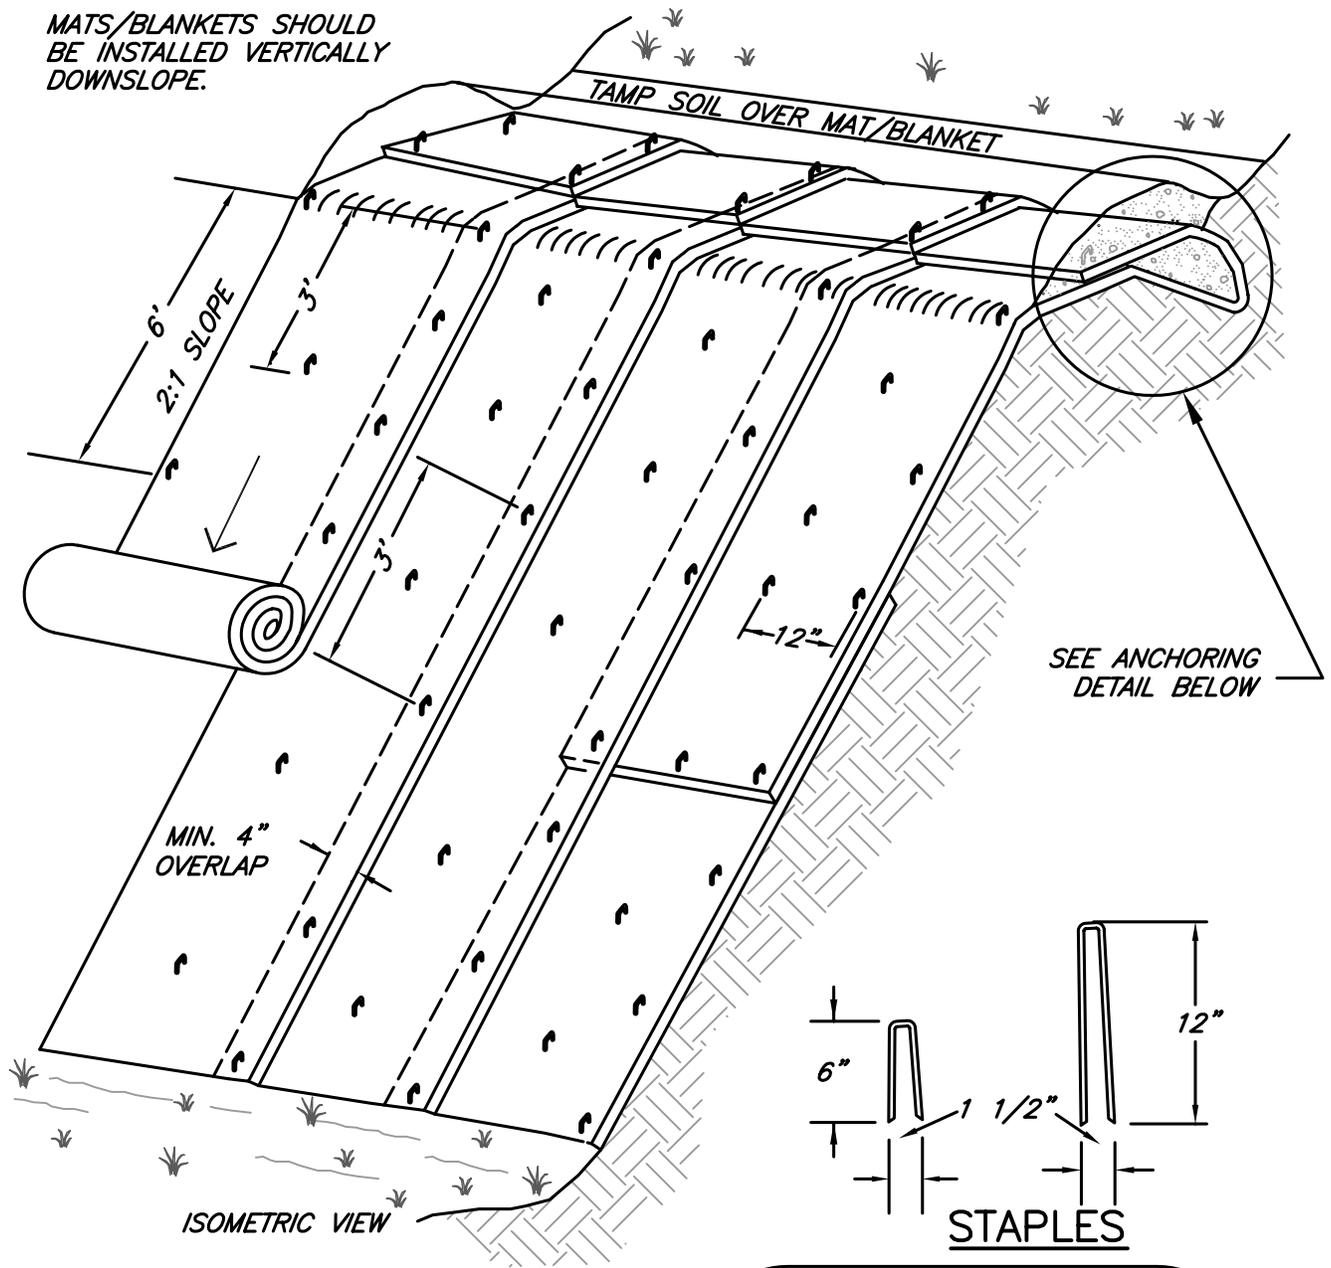


MATS/BANKETS SHOULD BE INSTALLED VERTICALLY DOWNSLOPE.

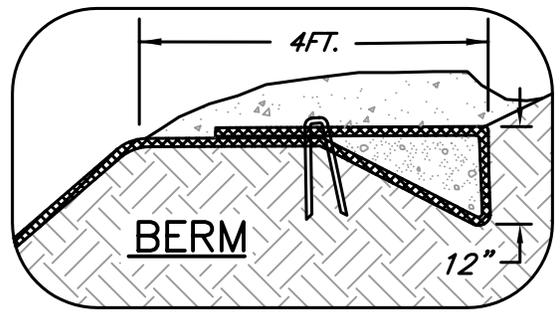

TYPICAL SLOPE
SOIL STABILIZATION

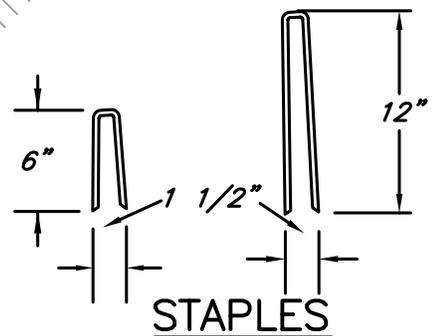

ANCHORING DETAIL

NOT TO SCALE