

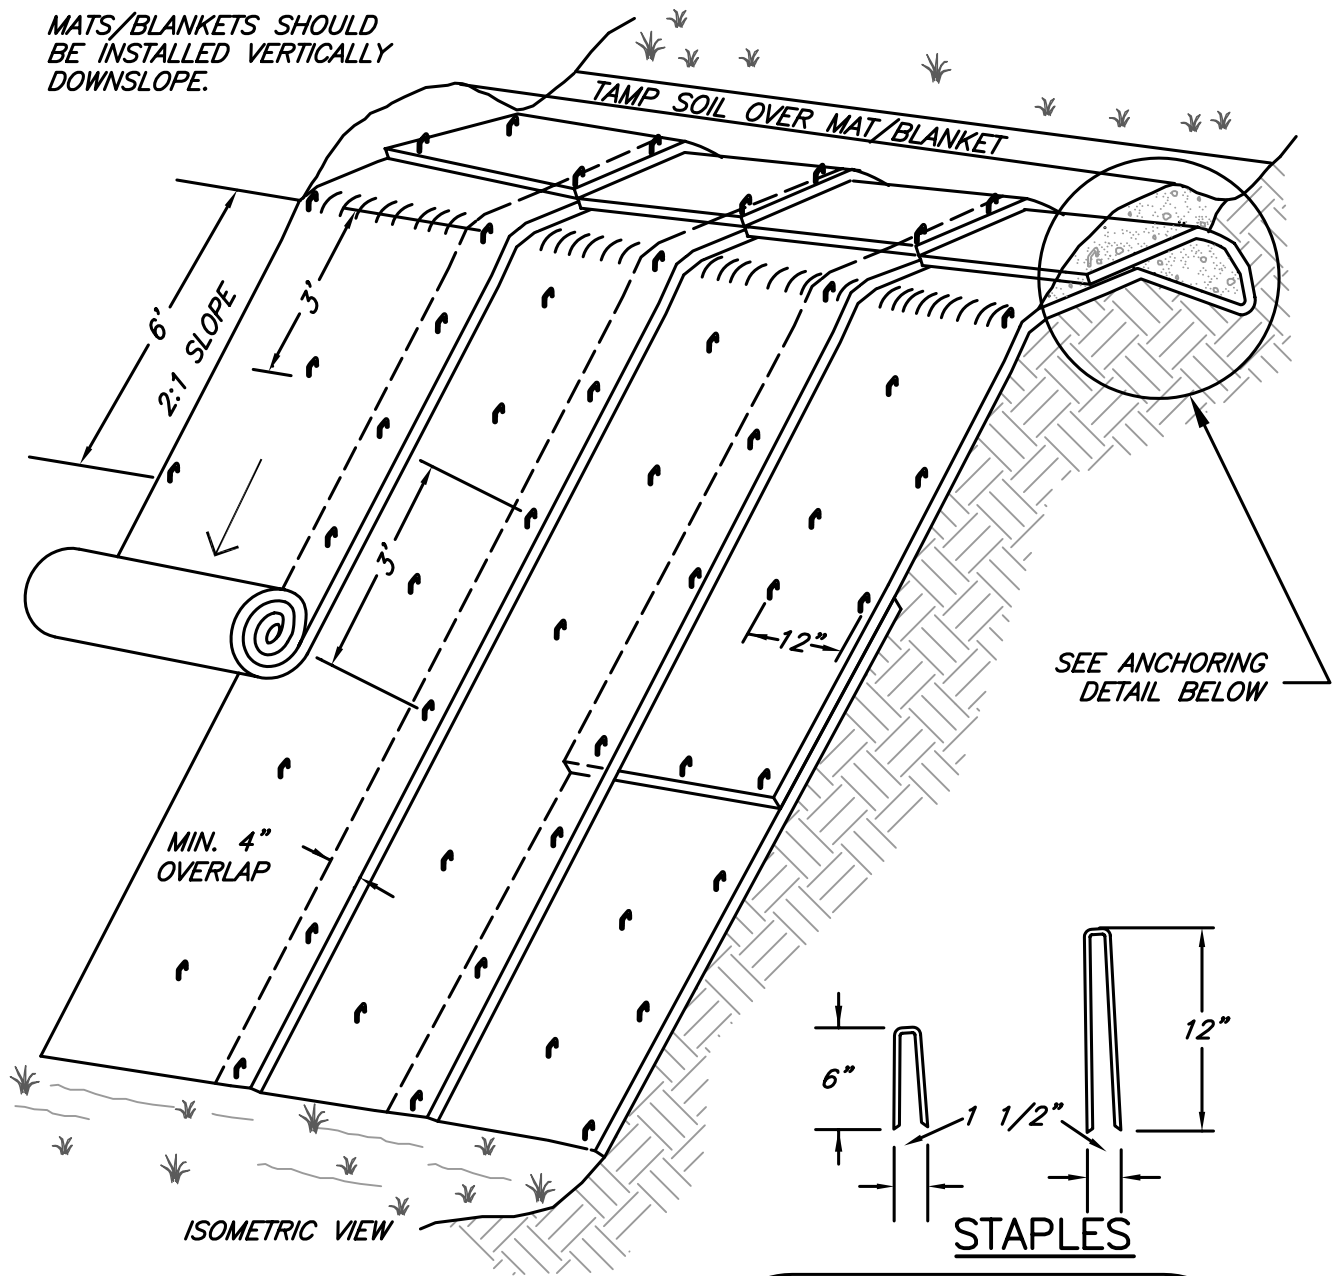


MATS/BLANKETS SHOULD BE INSTALLED VERTICALLY DOWNSLOPE.

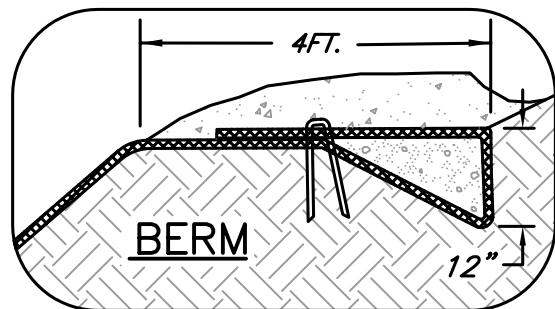

TYPICAL SLOPE  
SOIL STABILIZATION

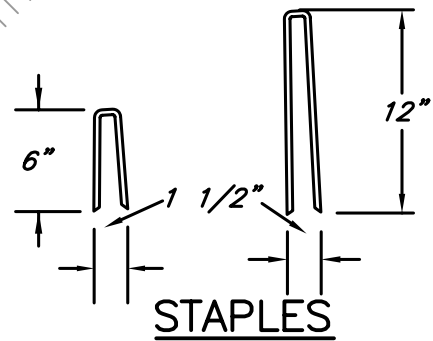

ANCHORING DETAIL

NOT TO SCALE

EROSION CONTROL MANUAL

EROSION BLANKETS  
SLOPE INSTALLATION

Detail Drawing 4.5-C