


TRENCH AND DIVERT WATER TO A CONTROLLED AND STABILIZED ROUTE AWAY FROM PLASTIC SHEETING - ALLOW NO WATER TO GO UNDER PLASTIC SHEETING

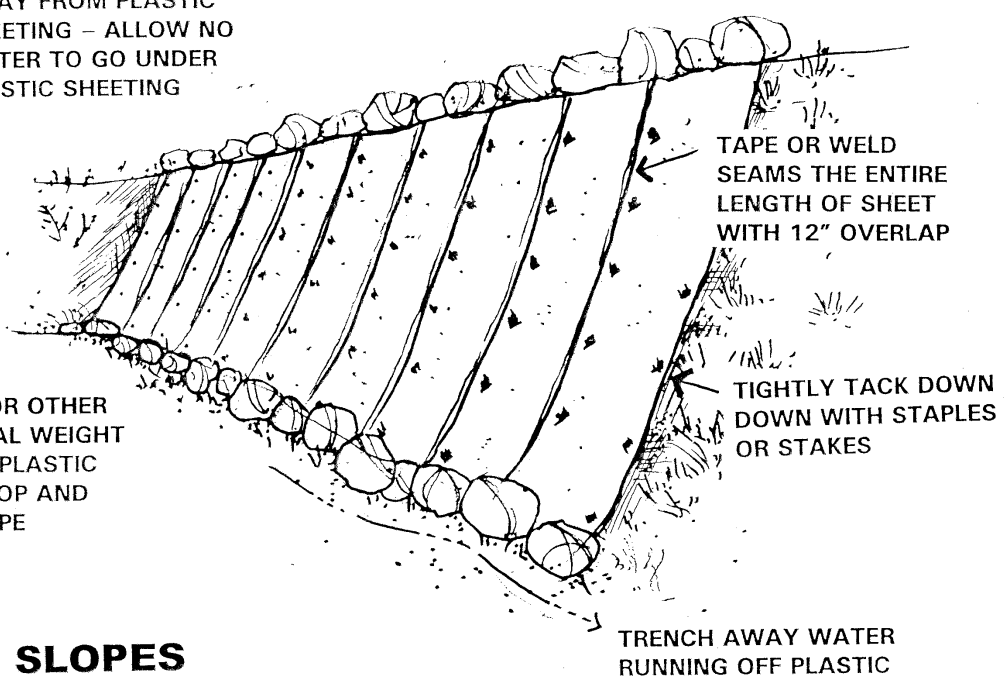

USE ROCK OR OTHER SUBSTANTIAL WEIGHT TO SECURE PLASTIC SHEET AT TOP AND TOE OF SLOPE

STEEP SLOPES

DRAWING NOT TO SCALE